


**Webasto Thermo Top C & E Installation**  
**Kit 4110551A**

**Electrical Connections**

- 1 The adapter harness has on one end fitted a square black socket and on the other end 4 wires.
- 2 The 4 wires connect to the rear of the TM1-N timer as shown below.

|              |           |
|--------------|-----------|
| <b>RED</b>   | <b>+</b>  |
| <b>RED</b>   | <b>A1</b> |
| <b>BLACK</b> | <b>A2</b> |
| <b>BROWN</b> | <b>-</b>  |

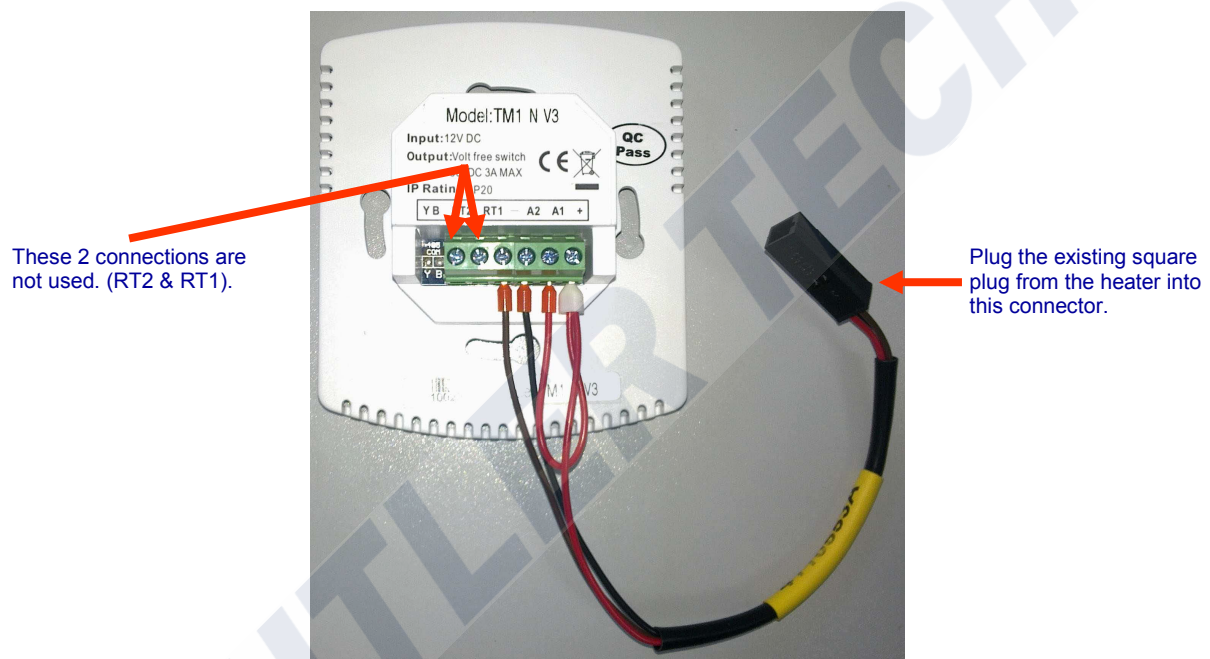

- 3 The square black socket on the other end of the adapter harness should now be connected to the existing heater square black plug. Note the square plug and socket are polarised and will only fit one way!

The installation is now complete and all that remains is to set the clock on the new timer and enter the desired on / off periods you require. Information on setting the time and programming can be found in the supplied Operating Instructions.